

SAVE THESE INSTRUCTIONS

ETHAN ALLEN®

09-0533 CROSBY WOODEN TABLE LAMP SAFETY, ASSEMBLY, CARE, AND TROUBLESHOOTING

IMPORTANT SAFETY INSTRUCTIONS

TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, AND PERSONAL INJURY

This lighting fixture is for indoor use only. This lamp is equipped with a polarized plug. One plug blade is wider than the other. **DO NOT MODIFY** the plug or power cord in any way. **DO NOT EXCEED** the recommended bulb wattage. Use only the type of bulb specified. Keep flammable materials away from bulb. **DO NOT OPEN** the product or alter the wiring in any way. If you would like to use an extension cord with this lamp, please adhere to the precautions provided with the cord.

CAUTION: Use care when unpacking. Locate **ALL INCLUDED PARTS** before disposing of packaging materials.

ASSEMBLY

No tools required. Lightbulb(s) are not included, except where required by State of California Title 20. See lighting fixture for bulb specification.

Parts (see Figure 1):

- A. Harp
- B. Lamp Base
- C. Shade
- D. Shade Finial
- E. Lamp Socket
- F. Plug Cap

Procedure (see Figure 1):

1. Install Harp (A) on Lamp Base (B).
2. Install Shade (C) on Harp (A).
3. Install Shade Finial (D) on Harp (A).
4. Install lightbulb in Lamp Socket (E).
5. Remove Plug Cap (F) from cord.

CARE AND CLEANING

- To clean, wipe with a soft dry cloth.
- **DO NOT USE** cleaners, scouring pads, etc.
- Before changing bulb(s), unplug the lamp and allow the bulb(s) to cool before removal.

Troubleshooting:

Problem:	Possible cause:	Correct by:
Bulb does not light	Bulb is burnt out or damaged	Replace bulb
	Power to lamp is off	Confirm power is on
	Lamp is not plugged in	Confirm lamp is plugged in

In the event that after troubleshooting the lighting fixture still does not work, please contact your local Ethan Allen Design Center.

Figure 1

