

ETHAN ALLEN®

MILANIA FLOOR LAMP

SAFETY, ASSEMBLY, CARE, AND TROUBLESHOOTING

09-2006

IMPORTANT SAFETY INSTRUCTIONS TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, AND PERSONAL INJURY.

This lighting fixture is for indoor use only. This lamp is equipped with a polarized plug. One plug blade is wider than the other. **DO NOT MODIFY** the plug or power cord in any way. **DO NOT EXCEED** the recommended bulb wattage. Use only the type of bulb specified. Keep flammable materials away from bulb. **DO NOT OPEN** the product or alter the wiring in any way. **Extension cord: Follow precautions provided with power cord.**

CAUTION: Use care when unpacking. Locate ALL PARTS INCLUDED before disposing of packaging materials.

ASSEMBLY, CARE, AND TROUBLESHOOTING


No tools are required for assembly. Light bulb is not included.

Parts Included (refer to figure):

- A. Finial
- B. Shade (*may be packed in separate carton*)
- C. Harp
- D. Socket (*attached, no assembly required*)
- E. Saddle
- F. Bracket
- G. Leg Assembly
- H. Screws (3)

Assembly Procedure (refer to figure):

1. Remove all parts from carton and place them on a soft, nonabrasive surface. Do not throw away any parts.
2. Remove Leg Assembly (G) and Bracket (F) from bubble pack.
3. Remove Screws (H) from hardware pouch.
4. Extend the Leg Assembly (G) by placing upright and pulling to extend all three legs.
5. Lower the Bracket (F) onto the top of the Leg Assembly (G), aligning the holes in the Bracket with the holes at the top of each leg.
6. Insert Screw (H) into one set of aligned holes and tighten by hand, clockwise. Repeat this step for the other two legs.
7. Remove the protective guard from the Saddle (E).
8. Insert Harp (C) into Saddle (E).
9. Lower Shade (B) onto Harp (C).
10. Screw Finial (A) into Harp (C).
11. Screw bulb into Socket (D).

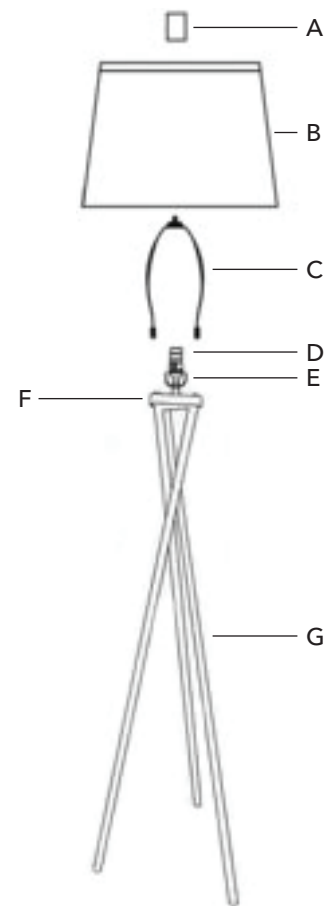

Milania Floor Lamp Assembly Instructions (continued)

09-2006

CARE AND CLEANING

1. To clean, wipe with a soft dry cloth.
2. AVOID USING cleaners, scouring pads, etc.
3. Before changing bulb(s), unplug lamp and allow the bulb(s) to cool.

TROUBLESHOOTING		
Problem:	Possible Cause:	What to Do:
Bulb does not light	Bulb is burnt out or damaged	Replace bulb
	Power to lamp is off	Confirm power is on
	Lamp is not plugged in	Confirm lamp is plugged in

After troubleshooting, if the light fixture still does not work, contact your local Ethan Allen Design Center.

SAVE THESE INSTRUCTIONS