TIBERIUS FLOOR LAMP

SAFETY, ASSEMBLY, CARE, AND TROUBLESHOOTING

09-2008

IOMPORTANT SAFETY INSTRUCTIONS TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, AND PERSONAL INJURY.

This lighting fixture is for indoor use only. This lamp is equipped with a polarized plug. One plug blade is wider than the other. DO NOT MODIFY the plug or power cord in any way. DO NOT EXCEED the recommended bulb wattage. Use only the type of bulb specified. Keep flammable materials away from bulb. DO NOT OPEN the product or alter the wiring in any way. **Extension cord: follow precautions provided with power cord.**

CAUTION: Use care when unpacking. Locate ALL PARTS INCLUDED before disposing of packaging materials.

ASSEMBLY, CARE, AND TROUBLESHOOTING

No tools are required for assembly. Light bulb is not included.

Parts Included (refer to figure):

- A. Shade (packed separately)
- B. Socket Ring (attached, no assembly required)
- C. Lamp Socket (attached, no assembly required)
- D. Switch (attached, no assembly required)
- E. Swing Arm (attached, no assembly required)
- F. Adjustable knob (attached, no assembly required)

Assembly Procedure (refer to figure):

- 1. Remove the Socket ring (B).
- 2. Put Shade (A) onto Socket (C) .
- 3. Secure with Socket ring (B).
- 4. Loosen the adjustable knob (F) and move the lamp up or down to desired height and tighten the adjustable knob (F).
- 5. Insert Bulb into Lamp Socket (C).
- 6. Remove Plug Cap from Plug.

(F)

CARE AND CLEANING

- 1. To clean, wipe with a soft dry cloth
- 2. AVOID USING cleaners, scouring pads, etc.
- 3. Before changing bulb(s), unplug lamp and allow the bulb(s) to cool.

Troubleshooting:		
Problem:	Possible cause:	What to Do:
Bulb does not light	Bulb is burnt out or damaged	Replace bulb
	Power to lamp is off	Confirm power is on
	Lamp is not plugged in	Confirm lamp is plugged in

After troubleshooting, if the light fixture still does not work, contact your local Ethan Allen Desgin Center.

SAVE THESE INSTRUCTIONS

Page 1 of 1

©2018 Ethan Allen Global, Inc.