

Magnus Floor Lamp Assembly Instructions (LED bulb use only)

09-2009 / 09-2010

IMPORTANT SAFETY INSTRUCTIONS

TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, AND PERSONAL INJURY:

This lighting fixture is for indoor use only. This lamp is equipped with a polarized plug. One plug blade is wider than the other. DO NOT MODIFY the plug or power cord in any way. DO NOT EXCEED the recommended bulb wattage. Use only the type of bulb specified. Keep flammable materials away from the bulb. DO NOT OPEN the product or alter the wiring in any manner. Extension cord: follow precautions provided with the power cord.

Use care when unpacking. Locate ALL THE PARTS INCLUDED before disposing of packaging materials. Remove the silica gel packet from the socket before plugging the lamp into an outlet.

ASSEMBLY, CARE, AND TROUBLESHOOTING

- No tools required for assembly
- Light bulb is not included

Parts Included: (Refer to the Figure)

- A. Shade (*attached, no assembly required*)
B. Lamp Socket (*attached, no assembly required*)
C. Switch (*attached, no assembly required*)
D. Adjustable knob (*attached, no assembly required*)

Assembly Procedure: (Refer to the Figure)


1. Loosen adjustable knob (D) and move the lamp up or down to desired height, then tighten the adjustable knob (D).
2. Insert Bulb into Lamp Socket (B). **ONLY insert an LED light bulb into this lamp.**
3. Remove Plug Cap from Plug.

Caring for and cleaning your lamp:

1. To clean, wipe with a soft dry cloth
2. AVOID USING cleaners, scouring pads, etc.
3. Before changing bulb(s), unplug lamp and allow the bulb(s) to cool.

Troubleshooting:

Problem:	Possible cause:	Correction:
Bulb does not light	Bulb is burnt or damaged	Replace bulb
	Power to lamp is off	Confirm power is on
	Lamp is not plugged in	Confirm lamp is plugged in

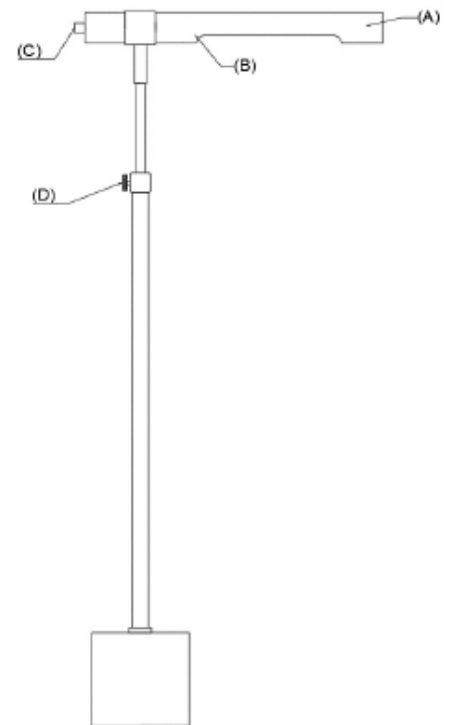

If the fixture still does not work after troubleshooting, please contact your local Ethan Allen Design Center.