

ETHAN ALLEN®

DURRAN TRAY-TABLE LAMP SAFETY, ASSEMBLY, CARE, AND TROUBLESHOOTING

09-2202

IMPORTANT SAFETY INSTRUCTIONS TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, AND PERSONAL INJURY.

This lighting fixture is for indoor use only. This lamp is equipped with a polarized plug. One plug blade is wider than the other. DO NOT MODIFY the plug or power cord in any way. DO NOT EXCEED the recommended bulb wattage. Use only the type of bulb specified. Keep flammable materials away from bulb. DO NOT OPEN the product or alter the wiring in any way. Extension cord: follow precautions provided with power cord.

CAUTION: Use care when unpacking. Locate ALL PARTS INCLUDED before disposing of packaging materials.

ASSEMBLY, CARE, AND TROUBLESHOOTING

No tools are required for assembly. Light bulb is not included.

Parts Included (refer to figure):


- A. Shade Finial
- B. Shade
- C. Shade Riser
- D. Lamp Sockets
- E. Saddle
- F. Adjustable Knob
- G. Switch Pull
- H. Lamp Post
- I. Tray Top
- J. Tray Base
- K. Legs (3)

Assembly Procedure (refer to figure):

1. Screw each Leg (K) to the Tray Base (J).
2. Screw the Lamp Post (H) into the Tray Top (I).
3. Screw the Shade Riser (C) into the Saddle (E).
4. Lower Shade (B) onto Shade Riser (C).
5. Screw Shade Finial (A) onto Shade Riser (C).
6. Screw bulbs into Lamp Sockets (D).
7. Remove plug cap from plug and insert into wall outlet.

CARE AND CLEANING

1. To clean, wipe.
2. AVOID USING cleaners, scouring pads, etc.
3. Before changing bulb(s), unplug lamp and allow the bulb(s) to cool.

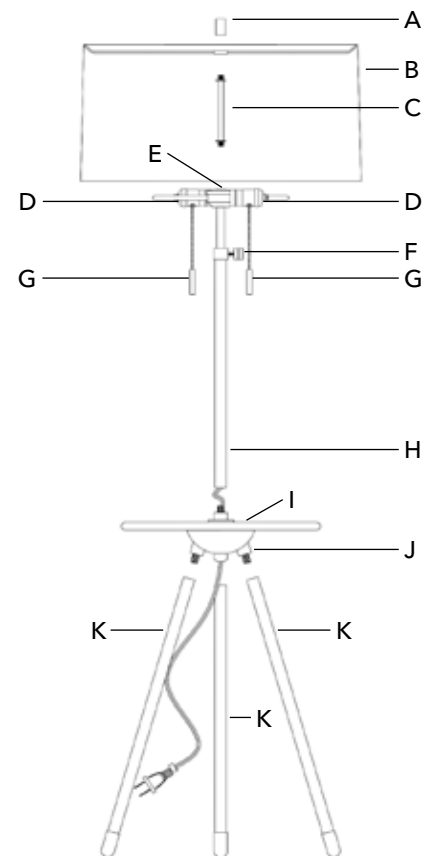

TROUBLESHOOTING		
Problem:	Possible Cause:	What to Do:
Bulb does not light	Bulb is burnt out or damaged	Replace bulb
	Power to lamp is off	Confirm power is on
	Lamp is not plugged in	Confirm lamp is plugged in

After troubleshooting, if the light fixture still does not work, contact your local Ethan Allen Design Center.

SAVE THESE INSTRUCTIONS