ETHAN ALLEN

Marian Pendant Light Assembly Instructions

093069 BRS

IMPORTANT SAFETY INSTRUCTIONS. READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING

We strongly recommend that all direct-wired lighting products be installed by a licensed electrician. Two people may be required for installation. DO NOT EXCEED the rated bulb wattage. Keep flammable materials away from bulbs. This fixture is shipped with all internal wiring intact. Do not open the product or alter the wiring in any manner.

Installation requires an electrical junction box in the ceiling sufficient to support the weight of the light fixture. This fixture weighs 8.58 lbs. (3.89 kg).

WARNING: Be certain the power to the electrical junction box is turned off at the circuit breaker before installation. Turning the power off at a light switch is not sufficient to prevent electrical shock.


CAUTION: Prior to installation, locate ALL INCLUDED PARTS before disposing of packing materials.

| TOOLS REQUIRED FOR INSTALLATION | | |
|---------------------------------|-------------------|--|
| Screwdrivers | Pliers | |
| Electrical Tape | Wire Connectors | |
| Wire Cutters | Adjustable Wrench | |

Note: Light bulb(s) are not included. Uses one 40W-maximum Type A bulb.

| PARTS NOT INCLUDED | | |
|--------------------|-----|-----------------------------|
| Part | QTY | Description |
| Α | 1 | Ceiling Outlet Junction Box |
| В | 1 | Ground Junction Box Wire |
| С | 1 | Hot Junction Box Wire |
| D | 1 | Neutral Junction Box Wire |

| PARTS INCLUDED (REFER TO FIGURE): | | |
|-----------------------------------|-----|----------------------|
| Part | QTY | Description |
| Е | 1 | Mounting Bracket |
| F | 2 | Mounting Screws |
| Ð | 2 | Long Screws |
| Η | 1 | Ground Screw |
| ı | 1 | Hot Fixture Wire |
| J | 1 | Neutral Fixture Wire |
| K | 1 | Ground Wire |
| L | 3 | Wire Connector |
| М | 1 | Canopy |
| Ν | 2 | Knurl Nut |
| 0 | 1 | Socket |
| Р | 1 | Bulb (not included) |

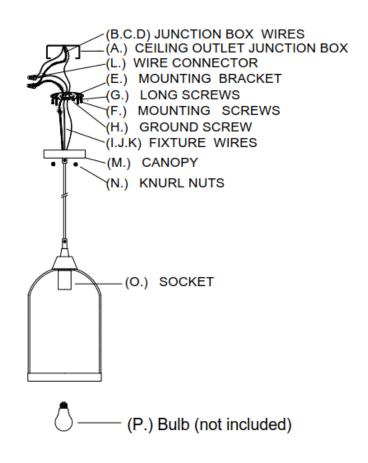

ETHAN ALLEN

Marian Pendant Light Assembly Instructions

093069 BRS

INSTALLATION PROCEDURE:

- 1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 2. Remove all the parts from the carton. Do not throw away any parts.
- 3. Gently pull existing Ground (B), Hot (C), and Neutral (D) Junction Box Wires down from the Ceiling Junction Box (A) and allow these to hang.
- 4. Fix Mounting Bracket (E) to Junction Box (A) with Mounting Screws (F).
- Make proper electrical connections as described in steps 6–10. A LICENSED ELECTRICIAN IS RECOMMENDED.
- 6. Carefully inspect the fixture wires. The Neutral Fixture Wire (J) is White, the Hot Fixture Wire (I) is Black, and the Ground Wire (K) is bare green.
- 7. Attach the Ground Wire (K) from the fixture to the Ground Junction Box Wire (B). The Ground Junction Box Wire (B) is usually copper. Fasten them together with a Wire Connector (L) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. If your Junction Box (A) does not have a Ground Junction Box Wire (B), insert the Ground Screw (H) into the Mounting Bracket (E) where it is marked "Ground" and wrap the fixture's bare ground wire around the Ground Screw (H). Tighten the screw to clamp the Ground Junction Box Wire (B) between the Ground Screw (H) head and Mounting Bracket (E). It is imperative that the Junction Box (A) in your home be properly grounded.
- 8. Connect the Neutral Fixture Wire (J) to the Neutral Junction Box Wire (D). Fasten them together with a plastic Wire connector (L) and wrap the connection with electrical tape. Make sure that no wire strands are exposed.
- 9. Connect the Hot Fixture Wire (I) to Hot Junction Box Wire (C). Fasten them together with a plastic Wire Connector (L) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
- 10. Gently tuck the wire connections neatly into the Junction Box (A).
- 11. Attach Canopy (M) to Mounting Bracket (E) with Long Screws (G). Attach Knurl Nuts (N) to Long Screws (G) and tighten.
- 12. Insert (1) 40W-maximum Type A light bulb (P) (not included) into the socket (O). Do not exceed the specified wattage.

Care Instructions

- 1. Wipe with a soft, dry cloth.
- 2. AVOID cleaners, harsh chemicals, scouring pads, etc. as these may cause damage to the fixture finish.

After troubleshooting, if the light fixture still does not work, contact your local Ethan Allen Design Center.

SAVE THESE INSTRUCTIONS