

ETHAN ALLEN®

Rattan Killian Chandelier ASSEMBLY INSTRUCTIONS

093073 BRS

IMPORTANT SAFETY INSTRUCTIONS. READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING.

We strongly recommend that all direct-wired lighting products be installed by a licensed electrician. Two people may be required for installation. DO NOT EXCEED the rated bulb wattage. Keep flammable materials away from bulbs. This light fixture is shipped with all internal wiring intact. Do not open the product or alter the wiring in any manner.

Installation requires an electrical junction box in the ceiling sufficient to support the weight of the light fixture. This fixture weighs:10.14lbs.(4.6kg).



WARNING: Be certain that the power to the electrical junction box is turned off at the circuit breaker before installation. Turning the power off at a light switch is not sufficient to prevent electrical shock.

CAUTION: Prior to installation, locate All INCLUDED PARTS before disposing of packaging materials.

TOOLS REQUIRED FOR INSTALLATION	
Screwdrivers	Pliers
Electrical Tape	Wire Connectors
Wire Cutters	Adjustable Wrench

Note: Lightbulb(s) are not included. See light fixture for bulb specification. Additional wiring supplies may be required.

Parts Not Included:		
Part	Qty.	Description
A	1	Ceiling Outlet Junction Box
B	1	Ground Junction Box Wire
C	1	Hot Junction Box Wire
D	1	Neutral Junction Box Wire

Parts Included (Refer to figure):		
Part	Qty.	Description
E	6	Rubber Screw
F	6	Wood Screw
G	1	Ground Fixture Wire
H	1	Hot Fixture Wire
I	1	Neutral Fixture Wire
J	1	Mounting Plate
K	2	Screw Rod
L	1	Ground Screw
M	2	Mounting Screw
N	3	Wire Connector
O	1	Canopy
P	2	Hanging Rings
Q	2	Ball Nut
R	4	Quick Link
S	2	Hanging Chain (6 ft.)
T	2	Fixture Loop

093073 BRS Rattan Killian Chandelier Assembly Instructions, continued

Assembly Procedure (refer to the figure):

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Remove all the parts from the carton. Do not throw away any parts.
3. Attach the Hanging Chain (S) to the lamp body lifting Fixture Loop (T) with the Quick Link (R) and lock it tightly.
4. Determine whether the length of the chain is suitable according to the height of the site, and adjust the length of the chain to a suitable position. Cut off the excess part of the chain.
5. Attach the Hanging Chain (S) to the Hanging Ring (P) with the Quick Link (R) and lock it tightly.
6. Pass the wires and ground wires intermittently through the Hanging Chain (S) and through the Hanging Ring (P) and straighten them at the same time. Cut off the excess after reserving the appropriate wiring length.
7. Secure the Mounting Plate (J) to the Ceiling Junction Box (A) using Mounting Screws (M). It is also necessary to nail Rubber Screw (E) to the ceiling in accordance with the location of the backplate reinforcement holes and reinforce the backplate with Wood Screws (F).
8. Gently pull the existing Ground (B), Hot (C), and Neutral (D) Junction Box Wires down from the Ceiling Outlet Junction Box (A) and allow these to hang.
9. Attach the Ground Fixture Wire (G) from the fixture to the Ground Junction Box Wire (B); it usually has green insulation around it or is bare wire. Fasten them together with a Wire Connector (N) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. If your Ceiling Outlet Junction Box (A) does not have a Ground Junction Box Wire (B), insert the Ground Screw (L) into the Mounting Plate (J) where it's marked "Ground", and wrap the fixture's bare ground wire around the Ground Screw (L). Tighten the screw to clamp the Ground Junction Box Wire (B) between the Ground Screw (L) head and the Mounting Plate (J). It is imperative that the Ceiling Junction Box (A) in your home be properly grounded.
10. Connect the Neutral Fixture Wire (I) to the Neutral Junction Box Wire (D); it usually has white insulation around it. Fasten them together with a plastic Wire Connector (N) and wrap the connection with electrical tape. Make sure that no wire strands are exposed.
11. Connect the Hot Fixture Wire (H) to Hot Junction Box Wire (C); it usually has black insulation around it. Fasten these together with a plastic Wire Connector (N) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
12. Gently tuck the wire connections neatly into the Ceiling Outlet Junction Box (A).
13. Align the Canopy (O) with the Screw Rod (K) and pass it through, locking the canopy with the Ball Nut (Q).
14. Insert six (6) 25W-maximum Type B Candelabra base incandescent light bulbs (not included), or six (6) 6W-maximum compact fluorescent bulbs (not included), or six (6) 4W-maximum LED bulbs (not included) into each socket. Do not exceed the specified wattage.

Care Instructions

1. Wipe with a soft, dry cloth.
2. AVOID cleaners, harsh chemicals, scouring pads, etc. as these may cause damage to the chandelier finish.

After troubleshooting, if the light fixture still does not work, contact your local Ethan Allen Design Center.

SAVE THESE INSTRUCTIONS

