

ETHAN ALLEN®

ORCHARD PENDANT ASSEMBLY INSTRUCTIONS

09-3110, 09-3111

IMPORTANT SAFETY INSTRUCTIONS. READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING.

We strongly recommend that all direct-wired lighting products be installed by a licensed electrician. Two people may be required for installation. DO NOT EXCEED the rated bulb wattage. Keep flammable materials away from bulb. This light fixture is shipped with all internal wiring intact. Do not open the product or alter the wiring in any manner.

Installation requires an electrical junction box in the ceiling sufficient to support the weight of the light fixture.



WARNING: Be certain that the power to the electrical junction box is turned off at the circuit breaker before installation. Turning the power off at a light switch is not sufficient to prevent electrical shock.

CAUTION: Prior to installation, locate ALL INCLUDED PARTS before disposing of packaging materials.

This fixture weighs 11.22 lbs./5.1 kg.

Parts Included (refer to figure):					
Part	Qty.	Description	Part	Qty.	Description
A	3	Wire Nuts	H	5	Extension Tubes
B	1	Mounting Bar	I	1	Oval Bracket
C	2	Mounting Plate Screws	J	52	Lucite Tubes
D	1	Loop Set	K	1	Split Washer
E	1	Canopy	L	1	Upper Shade Washer
F	1	Collar	M	1	Lower Shade Washer
G	1	Hook			

Assembly Procedure (refer to figure):

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY AT FUSE BOX/CIRCUIT BREAKER.
2. Remove all parts from carton. Do not throw away any parts.
3. Remove Mounting Bar (B), with Loop Set (D) attached, from Canopy (E) by loosening Collar (F).
4. Affix Mounting Plate (B) to ceiling outlet box with Mounting Plate Screws (C) provided.
5. Measure desired drop for fixture to hang and add/remove Extension Tubes (H) as needed. Guide wiring through Extension Tubes before threading tubes together. TO ADD/REMOVE EXTENSIONS: Screw the threaded top of one extension into the threaded opening at the base of the next extension. Make sure wiring is pulled tight when threading extensions together to prevent damage to the wire.
6. Thread bottom Extension Tube (H) onto the Threaded Nipple above Upper Shade Washer (L).
7. Guide wiring from Collar (F) through Canopy (E), Loop Set (D), and Mounting Bar (B).
8. Make proper electrical connections described in steps 9-11. A LICENSED ELECTRICIAN IS RECOMMENDED.
9. Attach ground wire from fixture (green or silver in color) to ground wire from outlet box. Fasten wires together with Wire Nut (A) and tightly wrap connection with electrical tape.
10. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with Wire Nut (A) and tightly wrap connection with electrical tape.


Orchard Pendant Assembly Instructions, continued

09-3110, 09-3111

11. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with Wire Nut (A) and tightly wrap connection with electrical tape.
12. Carefully push wire connections back into ceiling outlet box.
13. Lift Canopy (E) to ceiling outlet box and secure with Collar (F).
14. Screw the Extension Tube (H) and the attached lamp body to Loop Set (D).
15. Lift Oval Bracket (I) over bottom section of fixture. Slide Split Washer (K) between Upper Shade Washer (L) and Lower Shade Washer (M). Secure position of Oval Bracket (I) by turning Upper Shade Washer (L) clockwise until it rests firmly against Split Washer (K).
16. Slide a Lucite Tube (J) over the Oval Bracket (I) and push it into the small hole on the bracket. There are a total of 52 tubes; repeat the same steps for each.
17. Install proper bulbs into sockets.

Care and Cleaning:

1. Wipe with a soft dry cloth.
2. AVOID cleaners, scouring pads, etc.

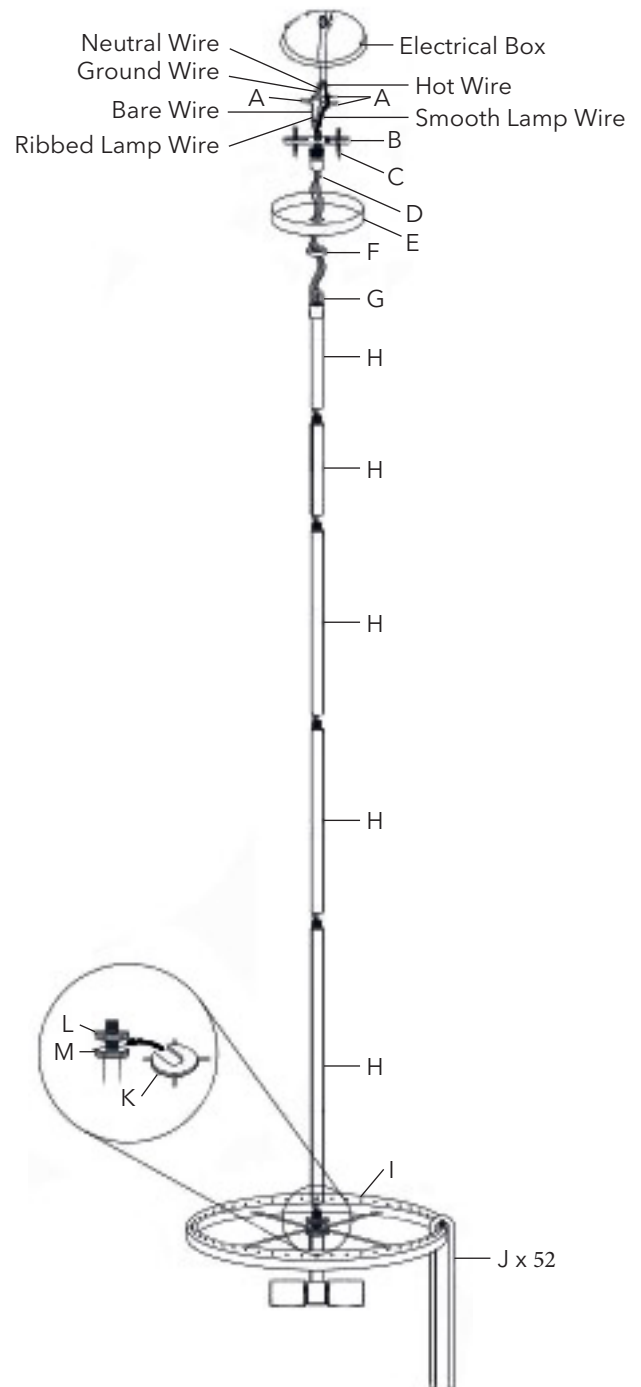

After troubleshooting, if the lighting fixture still does not work, contact your local Ethan Allen Design Center.

SAVE THESE INSTRUCTIONS