

# ETHAN ALLEN®

## Kash Woven Pendant Assembly Instructions

09-3124/09-3125/09-3126

### IMPORTANT SAFETY INSTRUCTIONS. READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING.

We strongly recommend that all direct-wired lighting products be installed by a licensed electrician. Two people may be required for installation. DO NOT EXCEED the rated bulb wattage. Keep flammable materials away from bulb. This light fixture is shipped with all internal wiring intact. Do not open the product or alter the wiring in any manner.

Installation requires an electrical junction box in the ceiling sufficient to support the weight of the light fixture.

This fixture weighs (large) 8.2 lbs./3.7 kg, (medium) 6.0 lbs./2.7 kg, (small) 3.3 lbs./1.4 kg.



**WARNING: Be certain that the power to the electrical junction box is turned off at the circuit breaker before installation. Turning the power off at a light switch is not sufficient to prevent electrical shock.**

CAUTION: Prior to installation, locate ALL INCLUDED PARTS before disposing of packaging materials.

### TOOLS REQUIRED FOR INSTALLATION:


1. Screwdrivers
2. Electrical Tape
3. Wire Cutters
4. Pliers
5. Wire Connectors
6. Adjustable Wrench

Note: Light bulb(s) are not included, except where required by State of California Title 20. See light fixture for bulb specification. Additional wiring supplies may be required.

Parts Included (refer to figure):					
Part	Qty.	Description	Part	Qty.	Description
A	3	Wire Connector	H	1	Canopy
B	1	Mounting Bracket	I	1	Pendant Cord
C	1	Ground Screw	J	1	Fixture Body
D	4	Mounting Screw	K	1	Strain Relief Screw
E	1	Nipple/threaded rod	L	1	Threaded Ring
F	4	Hex Nut	M	1	Collar Loop
G	4	Lock Washer			

### Assembly Procedure (refer to figure):

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY AT FUSE BOX/CIRCUIT BREAKER.
2. Carefully unpack all fixture parts and hardware and lay them out on a clear work surface.
3. Attach the Mounting Bracket (B) to the ceiling outlet junction box using the Mounting Screws (D). Tighten with a screwdriver until secure.
4. Position one Lock Washer (G) and Hex Nut (F) on the lower portion of the Nipple (E) and the other Hex Nut (F) on the upper portion of the Nipple (E).

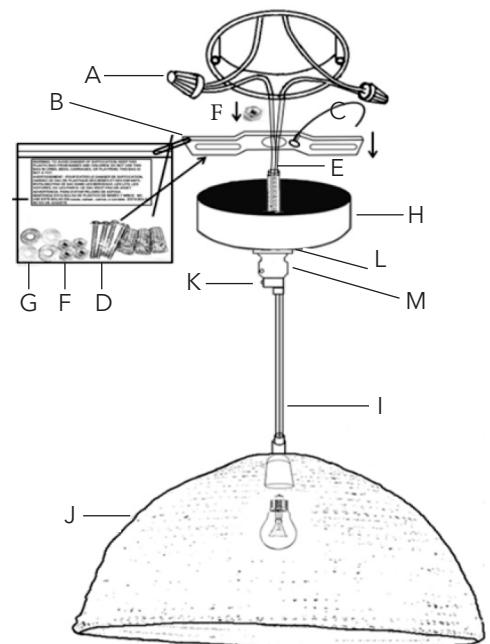

## Kash Woven Pendant Assembly Instructions continued

09-3124/09-3125/09-3126

5. Screw Nipple (E) on the Mounting Bracket (B) and tighten with Hex Nut (F) using a hex wrench or a pair of pliers. Attach Collar Loop (M) on the Nipple (E). Tighten with the Lock Washer (G) and Hex Nut (F) to firmly secure.
6. Determine the desired lighting fixture suspension length from the ceiling, allowing extra cord length for the ceiling outlet junction box wire connections as noted below.
7. Adjust the fixture's power cord length from the Canopy (H).
8. If needed, depending upon final fixture hanging position from the ceiling, cut off the extra length on the two-wire cord cable and bare ground wire. When cutting the power cord and bare ground wire, be sure to cut it so that it is at least 6" (152.4 mm) long inside the ceiling outlet junction box. To prepare to cut power cord for the installation process, use wire strippers to prepare the ends of the two wires so that there is about 1/2" of exposed wire for the Wire Connectors (A).
9. Slip the Canopy (H) over the open, lower end of Pendant Cord (I), making sure the finished side of the canopy is facing downward towards the floor.
10. Make proper electrical connections described in steps 11-16. A LICENSED ELECTRICIAN IS RECOMMENDED.
11. Carefully inspect the chandelier's fixture wires. The neutral fixture wire is ribbed. The hot fixture wire is smooth, and the bare copper wire is the ground wire.
12. Gently pull existing ground, hot, and neutral junction box wires down from the ceiling junction box and allow wires to hang.
13. Attach the ground wire from the fixture to the ground junction box wire; it usually has green insulation around it or is bare wire. Fasten them together with a Wire Connector (A) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. If your ceiling outlet junction box does not have a ground junction box wire, insert the Ground Screw (C) into the Mounting Bracket (B) where it's marked "Ground," and wrap the fixture's bare ground wire around the Ground Screw (C). Tighten the screw to clamp the ground junction box wire between the Ground Screw (C) head and the Mounting Bracket (B). It is imperative that the ceiling junction box in your home be properly grounded.
14. Connect the neutral fixture wire to the neutral junction box wire; it usually has white insulation around it. Fasten them together with a Wire Connector (A) and wrap the connection with electrical tape. Make sure that no wire strands are exposed.
15. Connect the hot fixture wire to hot junction box wire; it usually has black insulation around it. Fasten them together with a Wire Connector (A) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
16. Gently tuck the wire connections into the ceiling outlet junction box.
17. Slide the Canopy (H) and the Threaded Ring (L) up the Cord (I).
18. Place the Canopy (H) over the ceiling outlet junction box and secure it in place by screwing the Threaded Ring (L) onto the Collar Loop (M).
19. Insert one (1) 60-watt maximum E26 incandescent light bulb (not included) into socket. Do not exceed the specified wattage.
20. Restore power to ceiling outlet junction box and test the fixture.

### Care and Cleaning:

1. Wipe with a soft dry cloth.
2. AVOID cleaners, scouring pads, etc.

After troubleshooting, if the lighting fixture still does not work, contact your local Ethan Allen Design Center.

SAVE THESE INSTRUCTIONS