

ETHAN ALLEN®

Orchard Chandelier Assembly Instructions

09-3533/09-3534

IMPORTANT SAFETY INSTRUCTIONS

We strongly recommend that all direct-wired lighting products be installed by a licensed electrician. These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down. DO NOT subject the fixture to any shock while lit as shattering of bulbs may result.


This fixture weighs 21.45 lbs./9.75 kg.

Parts Included (refer to figure):

Part	Qty.	Description	Part	Qty.	Description
A	3	Wire Nuts	H	1	Threaded Nipple
B	1	Mounting Bar	I	1	Oval Bracket
C	2	Mounting Plate Screws	J	82	Lucite Tubes
D	1	Swivel Set	K	1	Upper Shade Washer
E	1	Canopy	L	1	Lower Shade Washer
F	1	Collar	M	1	Split Washer
G	5	Extension Tubes			

Assembly Procedure (refer to figure):

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY AT FUSE BOX/CIRCUIT BREAKER.
2. Remove all parts from carton. Do not throw away any parts.
3. Remove Mounting Bar (B), with Swivel Set (D) attached, from Canopy (E) by loosening Collar (F).
4. Affix Mounting Plate (B) to ceiling outlet box with Mounting Plate Screws (C) provided.
5. Measure desired drop for fixture to hang and add/remove Extension Tubes (G) as needed. Guide wiring through Extension Tubes before threading tubes together. TO ADD/REMOVE EXTENSIONS: Screw the threaded top of one extension into the threaded opening at the base of the next extension. Make sure wiring is pulled tight when threading extensions together to prevent damage to the wire.
6. Thread bottom Extension Tube (G) onto the Threaded Nipple (H) above Upper Shade Washer (K).
7. Guide wiring from Collar (F) through Canopy (E), Swivel Set (D), and Mounting Bar (B).

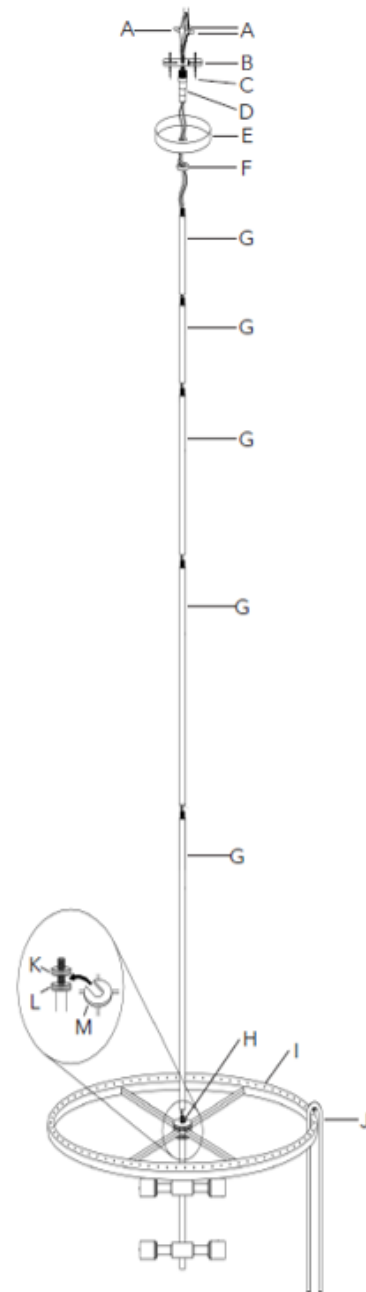

Orchard Chandelier Assembly Instructions continued

00-3533

8. Make proper electrical connections described in steps 9–11. A LICENSED ELECTRICIAN IS RECOMMENDED.
9. Attach ground wire from fixture (green or silver in color) to ground wire from outlet box. Fasten wires together with Wire Nut (A) and tightly wrap connection with electrical tape.
10. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with Wire Nut (A) and tightly wrap connection with electrical tape.
11. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with Wire Nut (A) and tightly wrap connection with electrical tape.
12. Carefully push wire connections back into ceiling outlet box.
13. Lift Canopy (E) to ceiling outlet box and secure with Collar (F).
14. Screw the Extension Tube (G) and the attached lamp body to Swivel Set (D)
15. Lift Oval Bracket (I) over bottom section of fixture. Slide Split Washer (M) between Upper Shade Washer (K) and Lower Shade Washer (L). Secure position of Oval Bracket (I) by turning Upper Shade Washer (K) clockwise until it rests firmly against Split Washer (M).
16. Slide a Lucite Tube (J) over the Oval Bracket (I) and push it into the small hole on the bracket. There are a total of 82 pieces of tube; repeat the same steps for each.
17. Install proper bulbs into sockets.

Care and Cleaning:

1. Wipe with a soft dry cloth.
2. AVOID cleaners, scouring pads, etc.

After troubleshooting, if the lighting fixture still does not work, contact your local Ethan Allen Design Center.

SAVE THESE INSTRUCTIONS