

ETHAN ALLEN®

CLARA BUD TABLE LAMP

ASSEMBLY INSTRUCTIONS

096079

IMPORTANT SAFETY INSTRUCTIONS

TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, AND PERSONAL INJURY:

This lighting fixture is for indoor use only. This lamp is equipped with a polarized plug. One plug blade is wider than the other. DO NOT MODIFY the plug or power cord in any way. DO NOT EXCEED the recommended bulb wattage. Use only the type of bulb specified. Keep flammable materials away from bulb. DO NOT OPEN the product or alter the wiring in any manner. Extension cord: follow precautions provided with power cord.

Use care when unpacking. Locate ALL PARTS INCLUDED before disposing of packaging materials.

ASSEMBLY, CARE, AND TROUBLESHOOTING

No tools required for assembly. Light bulb is not included, except where required by State of California Title 20.

Parts Included:

- A. Finial
- B. Shade
- C. Harp
- D. Lamp Socket
- E. Saddle
- F. Plastic Cap for electric plug

Assembly Procedure:


1. Insert the Harp (C) into the Saddle (E) and lower the harp caps until they cover the two-pronged Saddle (E).
2. Install Shade (B) over the assembled Harp (C)
3. Screw Finial (A) into Harp (C)
4. Install bulb into Lamp Socket(D)
5. Remove Plug Cap (F) from electric plug.

Caring for and cleaning your lamp:

1. Wipe with a soft dry cloth.
2. Avoid cleaners, scouring pads, etc.
3. Before changing bulb, unplug lamp and allow bulb to cool.

Troubleshooting:

Problem:	Possible cause:	Correct by:
Bulb does not light	Bulb is burnt out or damaged	Replace bulb
	Power to lamp is off	Confirm power is on
	Lamp is not plugged in	Confirm lamp is plugged in

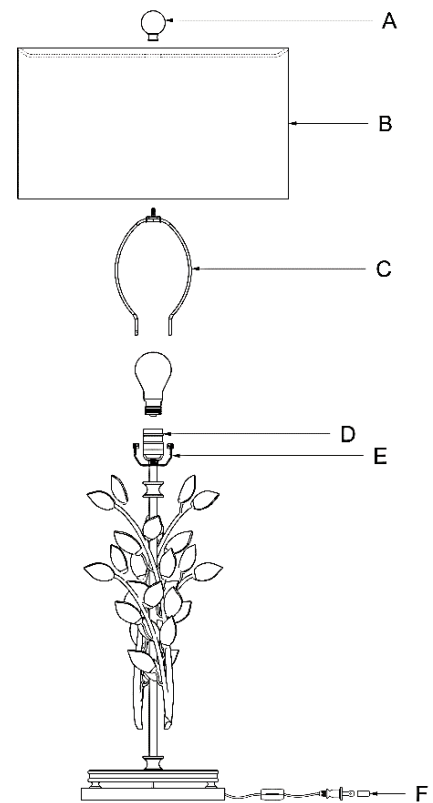

After troubleshooting, if the light fixture still does not work, contact your local Ethan Allen Design Center.

SAVE THESE INSTRUCTIONS