

ETHAN ALLEN

PERRY FABRIC OR LEATHER DESK LAMP BASE ASSEMBLY

INSTRUCTIONS 096097/096098

IMPORTANT SAFETY INSTRUCTIONS

TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, AND PERSONAL INJURY: This lighting fixture is for indoor use only. This lamp is equipped with a polarized plug. One plug blade is wider than the other. DO NOT MODIFY the plug or power cord in any way. DO NOT EXCEED the recommended bulb wattage (150 Watt). Use only the type of bulb specified. Keep flammable materials away from bulb. DO NOT OPEN the product or alter the wiring in any manner.

Extension cord: Follow precautions provided with power cord.

Use care when unpacking. Locate ALL PARTS INCLUDED before disposing of packaging materials.

ASSEMBLY, CARE, AND TROUBLESHOOTING

No tools are required for assembly. Light bulb is not included.

Parts Included (refer to figure):


- A. Finial
- B. Shade (may be packed in separate carton)
- C. Harp (styles may vary)
- D. Saddle
- E. Socket
- F. Lamp Base

Assembly Procedure (refer to figure):

1. Carefully remove all parts from the carton and place them on a flat surface.
Make sure you have all parts indicated before assembling this item.
2. Pull excess cord through the Lamp Base (F).
3. Insert Harp (C) into Saddle (D).
4. Lower Shade (B) onto Harp (C) and secure with Finial (A).
5. Insert bulb into Socket (E).

CARE AND CLEANING

1. To clean, wipe with a soft dry cloth.
2. AVOID USING cleaners, scouring pads, etc.
3. Before changing bulb(s), unplug lamp and allow the bulb(s) to cool.

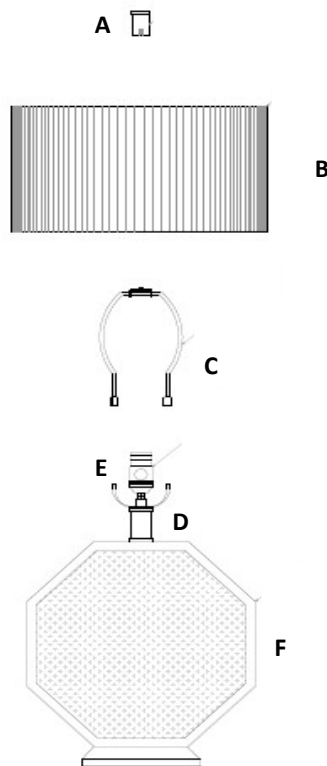

TROUBLESHOOTING		
Problem:	Possible Cause:	What to Do:
Bulb does not light	Bulb is burnt out or damaged	Replace bulb
	Power to lamp is off	Confirm power is on
	Lamp is not plugged in	Confirm lamp is plugged in

After troubleshooting, if the light fixture still does not work, contact your local Ethan Allen Design Center.

SAVE THESE INSTRUCTIONS