

ETHAN ALLEN®

Braxton Table Lamp Assembly Instructions

09-6108/09-6112

IMPORTANT SAFETY INSTRUCTIONS

TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, AND PERSONAL INJURY: This lighting fixture is for indoor use only. This lamp is equipped with a polarized plug. One plug blade is wider than the other. DO NOT MODIFY the plug or power cord in any way. DO NOT EXCEED the recommended bulb wattage. Use only the type of bulb specified. Keep flammable materials away from bulb. DO NOT OPEN the product or alter the wiring in any manner. Extension cord: Follow precautions provided with power cord.

Use care when unpacking. Locate ALL PARTS INCLUDED before disposing of packaging materials.

ASSEMBLY, CARE, AND TROUBLESHOOTING

No tools are required for assembly. Light bulb is not included.

Parts Included (refer to figure):

- A. Shade Finial
- B. Acrylic Diffuser
- C. Shade (may be packed in separate carton)
- D. Shade Riser
- E. Lamp Socket (attached to Lamp Base; no assembly required)
- F. Lamp Base

Assembly Procedure (refer to figure):

1. Screw Shade Riser (D) onto Lamp Socket (E).
2. Install Shade (C) onto Shade Riser (D).
3. Install Acrylic Diffuser (B) onto Shade Riser (D).
4. Install Shade Finial (A) onto Shade Riser (D).
5. Install bulb into Lamp Socket (E).
6. Remove plug cap from plug.

Care and Cleaning:

1. Wipe with a soft dry cloth.
2. AVOID cleaners, scouring pads, etc.
3. Before changing bulb, unplug lamp and allow bulb to cool.

TROUBLESHOOTING:

Problem:	Possible Cause:	What to Do:
Bulb does not light	Bulb is burnt out or damaged	Replace bulb
	Power to lamp is off	Confirm power is on
	Lamp is not plugged in	Confirm lamp is plugged in

After troubleshooting, if the lighting fixture still does not work, contact your local Ethan Allen Design Center.

SAVE THESE INSTRUCTIONS

