

ETHAN ALLEN[®]

Lamonta Table Lamp Assembly Instructions 096135

IMPORTANT SAFETY INSTRUCTIONS

TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, AND PERSONAL INJURY: This lighting fixture is for indoor use only and is equipped with a polarized plug. One plug blade is wider than the other. DO NOT MODIFY the plug or power cord in any way. DO NOT EXCEED the recommended bulb wattage. Use only the type of bulb specified. Keep flammable materials away from the bulb. DO NOT OPEN the product or alter the wiring in any manner. Extension cord: Follow precautions provided with power cord.

Use care when unpacking. Locate and remove all parts from package before disposing of packaging materials.

ASSEMBLY, CARE, AND TROUBLESHOOTING

No tools are required for assembly. Light bulb is not included.

Parts Included (refer to figure):

- A. Finial
- B. Shade
- C. Harp
- D. Saddle
- E. Socket
- F. Plug Cap

Assembly Procedure (refer to figure):


1. Insert Harp (C) onto Saddle (D).
2. Lower Shade (B) onto Harp (C).
3. Screw Finial (A) into Harp (C).
4. Screw bulb into Socket (E).
5. Remove Plug Cap (F).

Care and Cleaning:

1. Wipe with a soft, dry cloth.
2. Avoid cleaners, scouring pads, etc.
3. Before changing bulb, unplug lamp and allow bulb to cool.

Troubleshooting:

Problem	Possible Cause	How to Fix
Bulb does not light.	Bulb is burnt out or damaged.	Replace bulb.
	Power to lamp is off.	Power lamp by turning switch to "on" position.
	Lamp is not plugged in.	Plug lamp into appropriate outlet.

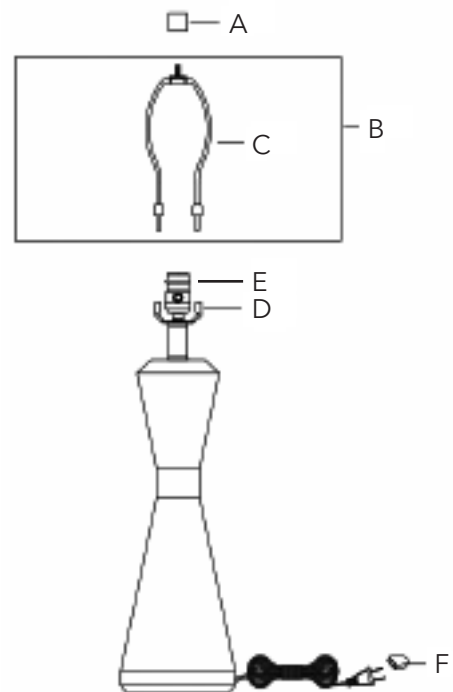

If the lamp still does not work after troubleshooting, contact your local Ethan Allen Design Center.

SAVE THESE INSTRUCTIONS