

ETHAN ALLEN®

MERRO DESK LAMP

SAFETY, ASSEMBLY, CARE, AND TROUBLESHOOTING

09-6150

IMPORTANT SAFETY INSTRUCTIONS TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, AND PERSONAL INJURY.

This lighting fixture is for indoor use only. This lamp is equipped with a polarized plug. One plug blade is wider than the other. DO NOT MODIFY the plug or power cord in any way. DO NOT EXCEED the recommended bulb wattage. Use only the type of bulb specified. Keep flammable materials away from bulb. DO NOT OPEN the product or alter the wiring in any way. Extension cord: follow precautions provided with power cord.

CAUTION: Use care when unpacking. Locate ALL PARTS INCLUDED before disposing of packaging materials.

ASSEMBLY, CARE, AND TROUBLESHOOTING


No tools are required for assembly. Light bulb is not included.

Parts Included (refer to figure):

- A. Lamp Socket (*attached, no assembly required*)
- B. Shade
- C. Socket Cover
- D. Socket Ring
- E. Switch

Assembly Procedure (refer to figure):

1. Remove Socket Ring (D) and Socket Cover (C).
2. Push the Shade (B) over the Lamp Socket (A).
3. Replace the Socket Cover (C) and secure with the Socket Ring (D).
4. Insert bulb into Lamp Socket (A).
5. Remove plug cap from plug.

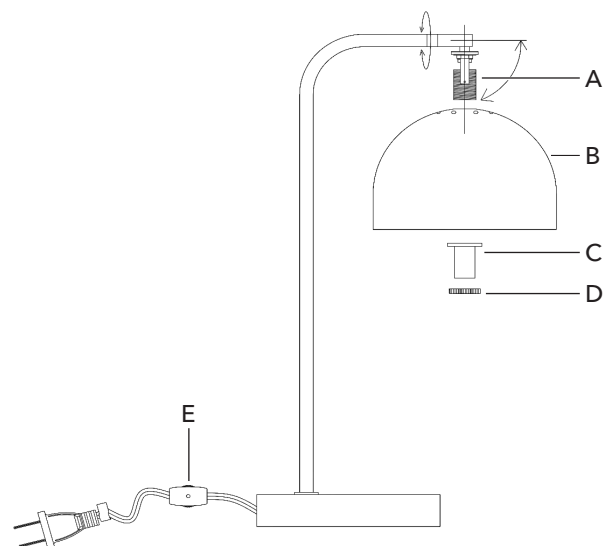

CARE AND CLEANING

1. To clean, wipe.
2. AVOID USING cleaners, scouring pads, etc.
3. Before changing bulb(s), unplug lamp and allow the bulb(s) to cool.

| TROUBLESHOOTING | | |
|---------------------|------------------------------|----------------------------|
| Problem: | Possible Cause: | What to Do: |
| Bulb does not light | Bulb is burnt out or damaged | Replace bulb |
| | Power to lamp is off | Confirm power is on |
| | Lamp is not plugged in | Confirm lamp is plugged in |

After troubleshooting, if the light fixture still does not work, contact your local Ethan Allen Design Center.

SAVE THESE INSTRUCTIONS