

ETHAN ALLEN[®]

Lorna Labradorite Table Lamp Assembly Instructions

096185 GRN

IMPORTANT SAFETY INSTRUCTIONS. READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING.

TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, AND PERSONAL INJURY:

This lighting fixture is for indoor use only. This lamp is equipped with a polarized plug. One plug blade is wider than the other. DO NOT MODIFY the plug or power cord in any way. DO NOT EXCEED the recommended bulb wattage. Use only the type of bulb specified. Keep flammable materials away from the bulb. DO NOT OPEN the product or alter the wiring in any manner. If using an extension cord, follow precautions provided with the power cord.

Use care when unpacking. Locate ALL THE PARTS INCLUDED before disposing of packaging materials. Remove the silica gel packet from the socket before plugging the lamp into an outlet.

ASSEMBLY, CARE, AND TROUBLESHOOTING

- No tools required for assembly
- Light bulbs (one 15W max LED, one 1W nightlight max are not included)

Parts Included: (Refer to the Figure)

- A. Harp
- B. Saddle
- C. Shade
- D. Finial
- E. External Socket
- F. Internal Socket
- G. Plug
- H. Switch

Assembly Procedure: (Refer to the Figure)

1. Install the Harp (A) onto the Saddle (B).
2. Install the Shade (C) into the Harp (A).
3. Install the Finial (D) onto the Harp (A).
4. Install the bulb (15W max LED) into External Socket (E).
5. Install the bulb (2.2W max LED) into Internal Socket (F) through the open bottom of the base.
6. Remove the plug cap from the Plug (G) and plug into outlet.
7. Switch (H) has four functions:
 - a) Turn 1 – exterior light on
 - b) Turn 2 – interior light on
 - c) Turn 3 – exterior and interior light on
 - d) Turn 4 – all lights off

Caring for and cleaning your lamp:

1. Wipe with a soft, dry cloth.
2. Avoid cleaners, scouring pads, etc., as these may cause damage to the lamp finish.
3. Before changing bulb, unplug the lamp and allow the bulb to cool first.

Troubleshooting:

| Problem: | Possible cause: | Correction: |
|---------------------|--------------------------|-----------------------------|
| Bulb does not light | Bulb is burnt or damaged | Replace bulb |
| | Power to lamp is off | Confirm power is on |
| | Lamp is not plugged in | Confirm lamp is plugged in. |

If the fixture still does not work after troubleshooting, please contact your local Ethan Allen Design Center.

SAVE THESE INSTRUCTIONS

