


# ETHAN ALLEN®

## 09-7237 LAMP

### ASSEMBLY INSTRUCTIONS

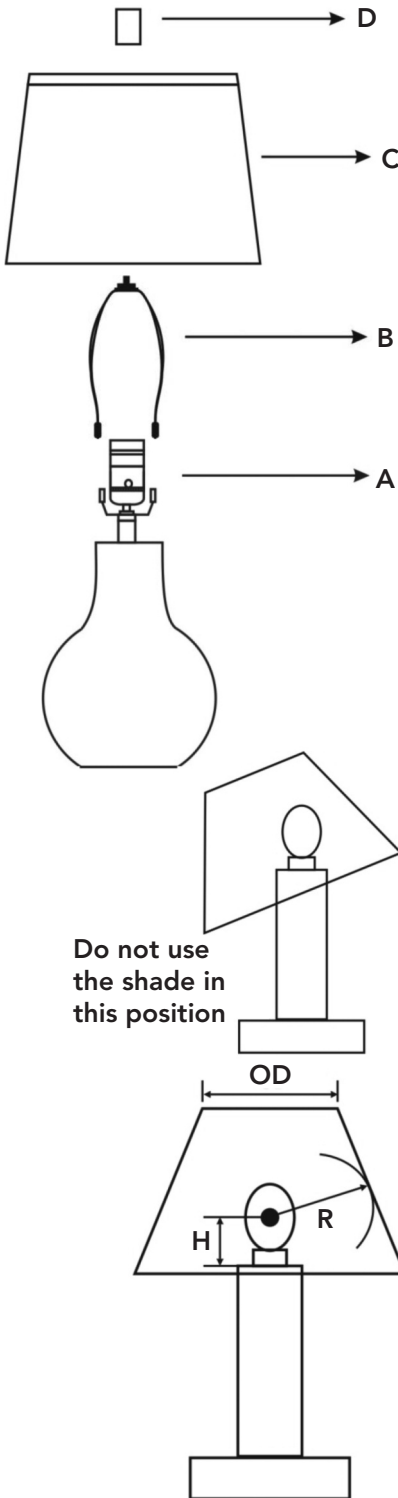

1. Remove lamp parts from carton.
2. Remove plastic coverings from lamp parts.
3. Remove protective guard from saddle.
4. Stand lamp base (A) on the flat surface.
5. Place the harp (B) on to the saddle.
6. Remove the finial (D) from the harp.
7. Place the shade (C) on to the harp.
8. Gently tighten the finial (D) and affix the shade in place.

#### IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

#### CAUTION

Use open top, open bottom type of shade. It is recommended that this lamp be used with the shade packed with it. If an alternative shade is used, the measurements must be checked to the specifications below to reduce the risk of fire. Using an oversized shade may cause the lamp to tip over.

Lamp Holder		Marked Lamp Wattage	OD – Minimum Opening Diameter		R – Minimum Lamp-to-Shade Spacing		H – Lamp Centerline Length	
Base Size	Type		Inches	(mm)	Inches	(mm)	Inches	(mm)
Medium	A	25W	3	76.2	1-5/8	41.2	2-3/4	69.8
Medium	A	40W	3.5	88.9	2	50.8	3-1/4	82.5
Medium	A	60W	3.5	88.9	2-1/2	63.5	3-1/4	82.5
Medium	A	75W	3.5	88.9	2-7/8	73	3-1/4	82.5
Medium	A	100W	4	101.6	3-1/2	88.9	3-1/4	82.5
Medium	A	150W	4.5	114.3	4-3/4	120.6	3-1/4	82.5