

Pippa Chandelier ASSEMBLY INSTRUCTIONS

093077 CHM

IMPORTANT SAFETY INSTRUCTIONS. READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING.

We strongly recommend that all direct-wired lighting products be installed by a licensed electrician. Two people may be required for installation. DO NOT EXCEED the rated bulb wattage. Keep flammable materials away from bulbs. This light fixture is shipped with all internal wiring intact. Do not open the product or alter the wiring in any manner.

Installation requires an electrical junction box in the ceiling sufficient to support the weight of the light fixture. This fixture weighs: 11 lbs.



WARNING: Be certain that the power to the electrical junction box is turned off at the circuit breaker before installation. Turning the power off at a light switch is not sufficient to prevent electrical shock. **CAUTION:** Before installation, locate All INCLUDED PARTS before disposing of packaging materials.

TOOLS REQUIRED FOR INSTALLATION

Screwdrivers	Pliers
Electrical Tape	Wire Connectors
Wire Cutters	Adjustable Wrench


Note: Lightbulb(s) are not included. See light fixture for bulb specification. Additional wiring supplies may be required.

Parts Not Included:

Part	Qty.	Description
A	1	Electrical Box
B	1	Hot Junction Box Wire
C	1	Neutral Junction Box Wire
D	1	Ground Junction Box Wire

Parts Included (Refer to Figure):

Part	Qty.	Description
E	3	Wire Connector
F	1	Mounting Cross Bar Bracket
G	1	Ground Screw
H	2	Mounting Screw
I	1	Nipple
J	2	Hex Nut
K	1	Lock Washer
L	1	Canopy
M	1	Screw Collar Loop
N	1	Screw Collar/Threaded Ring
O	1	Chain

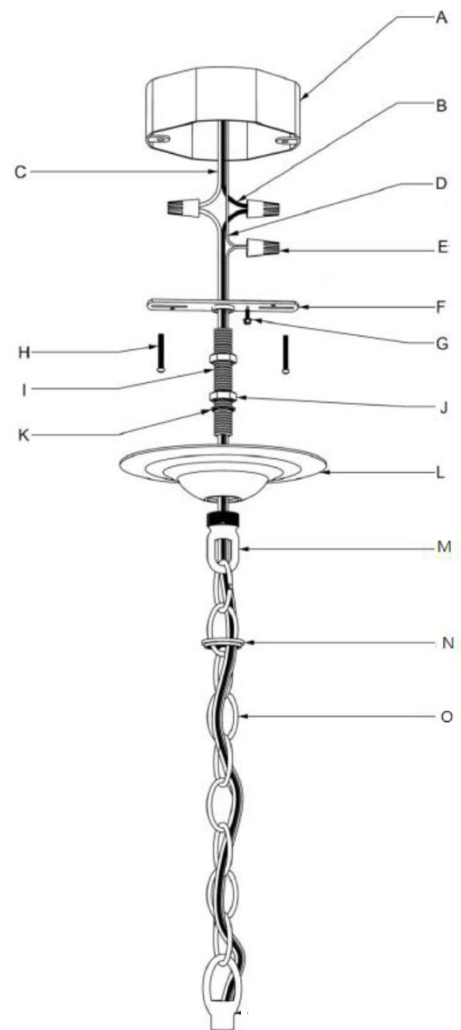

Assembly Procedure (refer to the figure):

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Remove all the parts from the parts carton. Do not throw away any parts!
3. Gently pull existing Ground Wire (D), Hot (B), and Neutral (C) Junction Box Wires down from the Electrical Box (A) and allow these to hang.
4. Attach the Mounting Cross Bar Bracket (F) to the Electrical Box (A) using the Mounting Screws (H). Tighten Mounting Screws (H) with a screwdriver until secure.
5. Attach one Hex Nut (J) to the top and the other Hex Nut (J) to the bottom of the Nipple (I). Attach the Lock Washer (K) beneath the bottom Hex Nut (J) before attaching the Screw Collar Loop (M) to the bottom end of the Nipple (I).
6. Attach as many of the 1" Hanging Chain (O) links together as needed to achieve the desired installation distance from your ceiling.
7. Make proper electrical connections as described in steps 8–12. A LICENSED ELECTRICIAN IS RECOMMENDED.
8. Carefully inspect the fixture wires. The Neutral Fixture Wire is ribbed. The Hot Fixture Wire is smooth, and the Ground Wire is copper.
9. Attach the ground wire from the fixture to the junction box's Ground Wire (D), which is bare copper wire. Fasten them together with a Wire Connector (E) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. If your Electrical Box (A) does not have a ground wire, insert the Ground Screw (G) into the Mounting Cross Bar Bracket (F) where it's marked "Ground," and wrap the fixture's bare ground wire around the Ground Screw (G). Tighten the screw to clamp the Ground Wire (D) between the Ground Screw (G) head and the Mounting Cross Bar Bracket (F). The Electrical Box (A) in your home must be properly grounded.
10. Connect the Neutral Fixture Wire to the Neutral Junction Box Wire (C); it usually has white insulation around it. Fasten them together with a plastic Wire Connector (E) and wrap the connection with electrical tape. Make sure that no wire strands are exposed.
11. Connect the Hot Fixture Wire to the Hot Junction Box Wire (B); it usually has black insulation around it. Fasten these together with a plastic Wire Connector (E) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
12. Gently tuck the wire connections neatly into the Electrical Box (A).
13. Secure the top of the Nipple (I) to the Mounting Cross Bar Bracket (F) with the Hex Nut (J), exposing approximately 2" of the thread. Then secure the Screw Collar Loop (M) to the bottom end of the Nipple (I) with the Hex Nuts (J) and Lock Washer (K).
14. Slide the Canopy (L) up the Chain (O) and over the Nipple (I) and the Screw Collar Loop (M).
15. Place the Canopy (L) over the Electrical Box (A) and secure it in place by screwing the Screw Collar (N) onto the Screw Collar Loop (M).

ETHAN ALLEN®

17. Insert eight (8) 40W-maximum Candelabra base incandescent light bulbs (not included) or eight (8) 4.5W-maximum LED bulbs (not included) into each socket. Do not exceed the specified wattage.

Care Instructions

1. Wipe with a soft, dry cloth.
2. AVOID cleaners, harsh chemicals, scouring pads, etc. as these may cause damage to the chandelier finish.